



# DryTAG RH Temp/RH Sensor

## QUICK START GUIDE

### SETUP

 
Thank you for purchasing a Phoenix DryTAG RH Bluetooth Beacon. Please follow these steps to successfully locate your DryTAG RH, add it to a piece of equipment and add that equipment to your inventory in the DryLINK® Mobile App. For a more information on DryLINK and the entire Ecosystem, visit [www.usephoenix.com/phoenix-drylink-mobile-app/](http://www.usephoenix.com/phoenix-drylink-mobile-app/).



Scan QR code for more information on DryLINK®



Pull out the battery tab to activate the battery

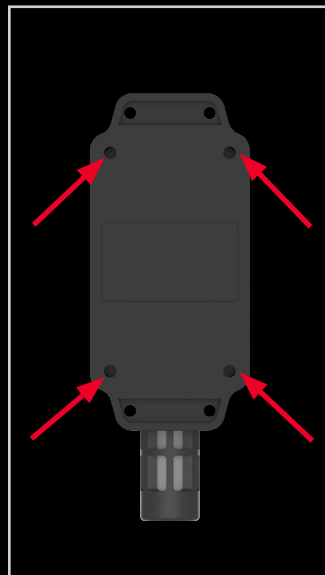

Tighten the screws if needed

# DryTAG RH Temp/RH Sensor

 
## QUICK START GUIDE

The DryTAG RH can be permanently attached to the outlet of a dehumidifier or used as a standalone thermo-hygrometer to automate the readings for an affected area, unaffected area, or HVAC.

If you choose to mount the DryTAG RH on a dehumidifier, please see our mounthing instruction before continuing.


### Adding your DryTAG RH in the DryLINK app

- Once the unit is mounted, open the DryLINK app.
- Add DryTAG RH to your inventory as a standalone thermo-hygrometer or as an outlet reader for any dehumidifier.

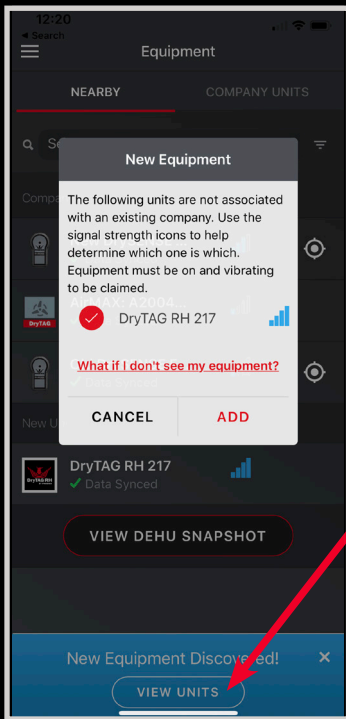

A blue box will appear at the bottom of the screen if a new (unclaimed) DryTAG RH is in range.

 Click "View Units" to select the DryTAG RH you are installing.

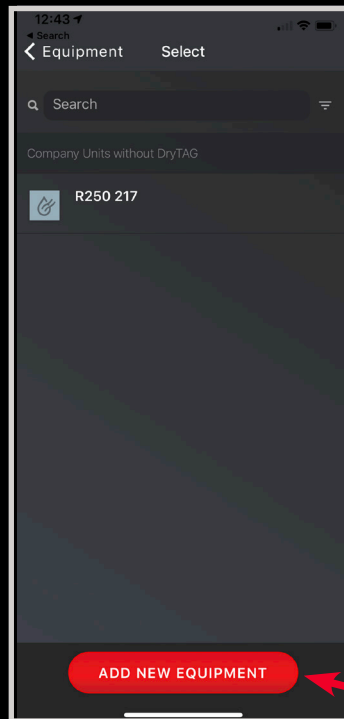

After you select the unit and click "add," you will see all of your non-smart equipment options.

Add any mounted DryTAG RH to the correct dehumidifier.

For all non-smart dehumidifiers not included in the DryLINK app, click "Add New Equipment" and add them to your inventory.

If you want to use the DryTAG RH as a standalone thermo-hygrometer, also click "Add New Equipment."

# DryTAG RH Temp/RH Sensor

## QUICK START GUIDE

← Select Add Equipment CANCEL

Equipment Name  
DryTAG RH 217

EQUIPMENT TYPE  
 Dehumidifier  
 Meter

TYPE  
Hygrometer

Manufacturer  
Phoenix

 
Model  
DryTAG RH

Serial Number  
12234555217


Save & Add Another

SAVE & FINISH

After clicking “Add New Equipment” either select dehumidifier or meter and fill in the information.

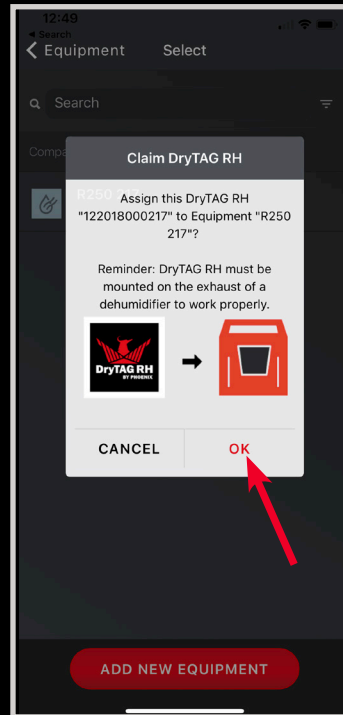

 
If you select a dehumidifier to add the DryTAG RH to, you will see this screen. Click “OK.”

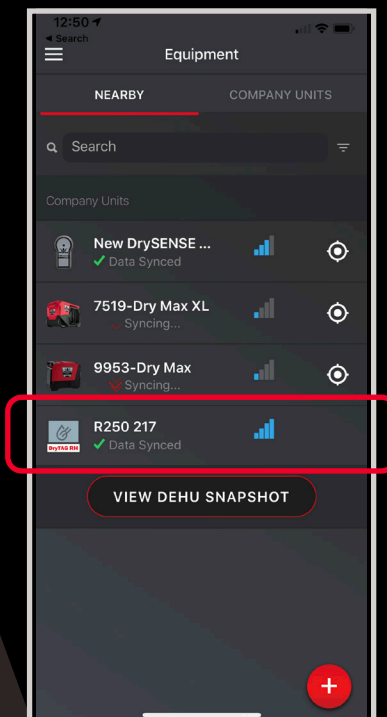


After clicking “OK” it will become associated with the selected dehumidifier in your inventory and will provide readings automatically.

# DryTAG RH Temp/RH Sensor
 
## QUICK START GUIDE

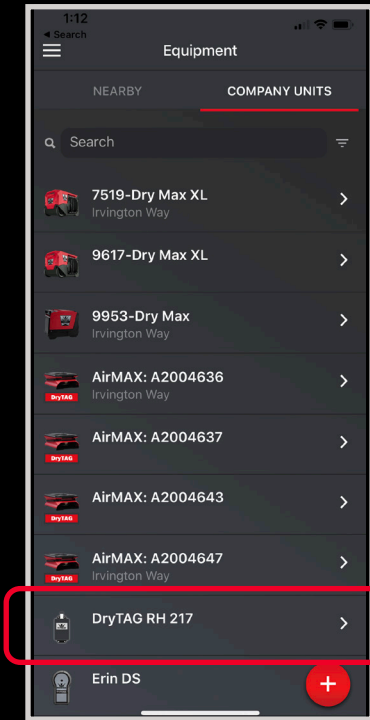

 If the DryTAG RH is added as a standalone thermo-hygrometer, it will appear under your Company Units inventory tab.

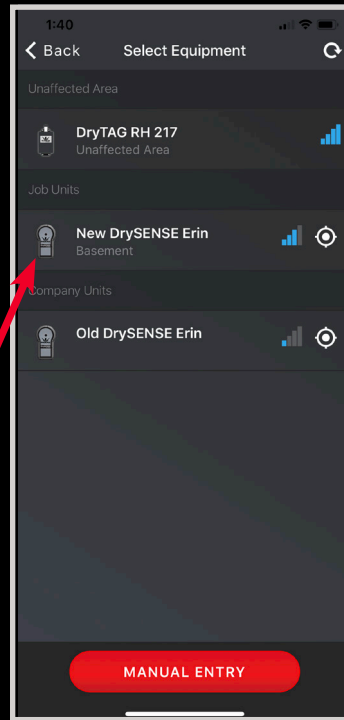

When using the DryTAG RH on a job as a standalone thermo-hygrometer, click on the affected, unaffected or HVAC. You will be shown a list of smart equipment to which the DryTAG RH can be assigned to take readings.

Select the unit for which the DryTAG RH will be gathering readings. Data will be gathered for the remainder of the job it's associated with and provide the same readings on future visits.

The DryTAG RH is meant to be permanently used as either the outlet for a dehumidifier or as a stand alone Thermo-Hygrometer. To change how it is used, go to the equipment details, click the ellipsis, and click remove DryTAG RH. Delete it from your inventory. If you do not click "Remove DryTAG" first, it will remember the original association and not allow you to change it. Additionally, the DryTAG RH may take up to 15 minutes to pop up the blue box allowing you to add the unit again.