



BLUETOOTH KIT FOR PHOENIX **DryMAX**


INSTALLATION INSTRUCTIONS

| Kit Includes | Tools Needed |
|--------------------------|-----------------|
| 1- 4041914 Control Board | T20 Torx Driver |

1. Ensure unit is unplugged.
2. Remove the four T20 Torx screws.



Original DryMAX Board

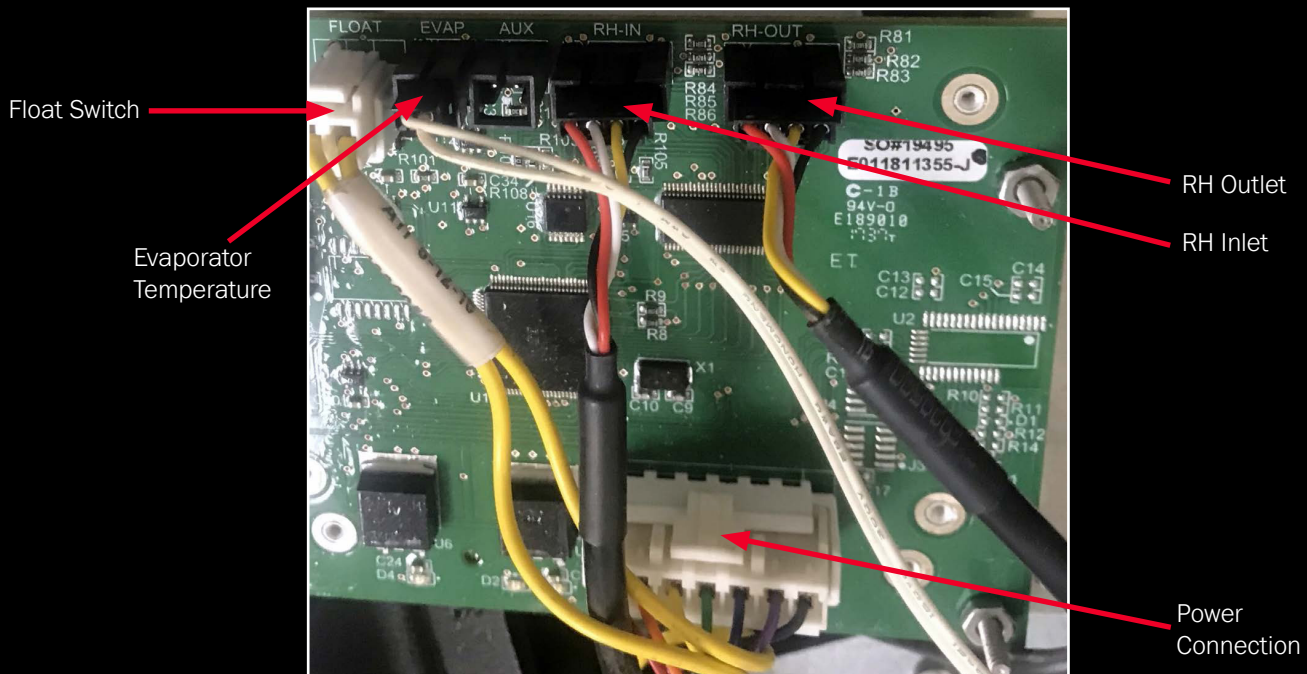



3. Label the wires, especially the RH Inlet and Outlet, to help identify them when connecting the new board (recommended).
4. Pinch and disconnect the five connectors: Float Switch, Evap Temp, RH Inlet, RH Outlet and Power Connection.

BLUETOOTH KIT FOR PHOENIX **DryMAX**

INSTALLATION INSTRUCTIONS

New DryMAX with Bluetooth Board

5. Connect the Float Switch, Evap Temp, RH Inlet, RH Outlet and Power Connection to the new board as shown below. When complete, your board should appear as shown in second photo.

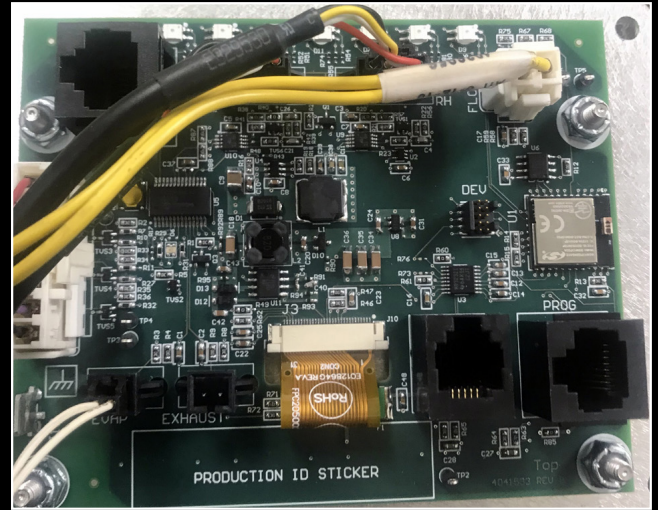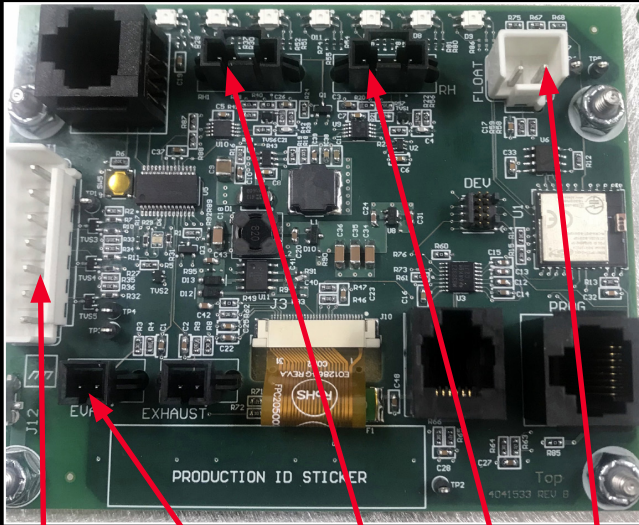

Power Connection Evaporator Temperature RH Outlet RH Inlet Float Switch




6. Install the four T20 Torx screws.

7. Plug your dehumidifier in to an outlet.

8. Make sure the Bluetooth on your device is on.

Connecting DryMAX BLE to DryLINK® app

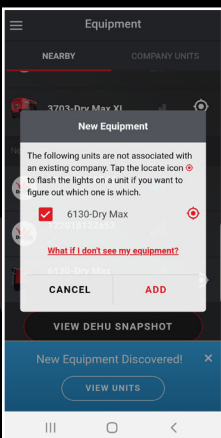

9. Open your DryLINK® app.

10. When you see the blue bar at the bottom of the app, claim your dehumidifier.

11. Optionally add the serial number of your unit to the app. (See the DryLINK® web page usephoenix.com/drylink/ecosystem/ for further instructions.)