# DRYTAG RH INSTALLATION INSTRUCTIONS



#### **Setting Up Your DryTAG RH**

- 1. Using the two screws near the battery pull tab using a Phillips #1.
- 2. Remove the battery pull tab and discard.
- 3. Tighten the two screws.
- 4. Follow instructions on TS- 1131 to add the DryTAG RH to DryLINK.
- 5. After installation onto equipment (see below), check that equipment shows as "on" within DryLINK.

#### **Installing Onto Equipment**

General

The DryTAG RH can be mounted with cable ties or screws. We recommend using cable ties.

### **Mounting DryTAG RH on a Phoenix R250**

#### **STEP**

### **MOUNTING INSTRUCTIONS**

1



Ensure the dehumidifier is unplugged.

2



Remove lay-flat duct ring.

3



Using a T20 Torx screwdriver, remove the 4 screws securing the outlet grill in place.

Λ



Remove grill.



### **Mounting DryTAG RH on a Phoenix R250**

#### **STEP**

### **MOUNTING INSTRUCTIONS**

5



Place DryTAG RH on the grill as shown.

6



Thread zip ties through the slots in the DryTAG RH.

7



Pull each end of the zip ties through the holes in the grill.

8



Secure zip ties.




# **Mounting DryTAG RH on a Phoenix R250**

### **STEP**

### **MOUNTING INSTRUCTIONS**

9

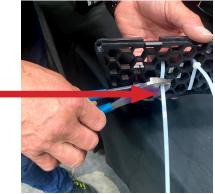

Using a side cutter, trim off excess.

10



Re-install grill onto unit.

11



Re-install screws.

**12** 



Re-install lay-flat duct ring.



# **Mounting DryTAG RH on a Phoenix R250**

**STEP** 

### **MOUNTING INSTRUCTIONS**

9



Install complete.





USEPHOENIX.COM | 800-533-7533



